


**SPECIFICATION CUSTOMER CONFIDENTIAL FOR NOKIA 2403 260 00017**

**INSTRUCTION TO PULL OFF THE PROTECTION FOILS  
FROM COVER - RA RECEIVER 4,8x10x2 mm**

Distribution list: according to PDM


**PRODUCTNAME: RA RECEIVER**

**ORDER NO.: 2403 260 00017**

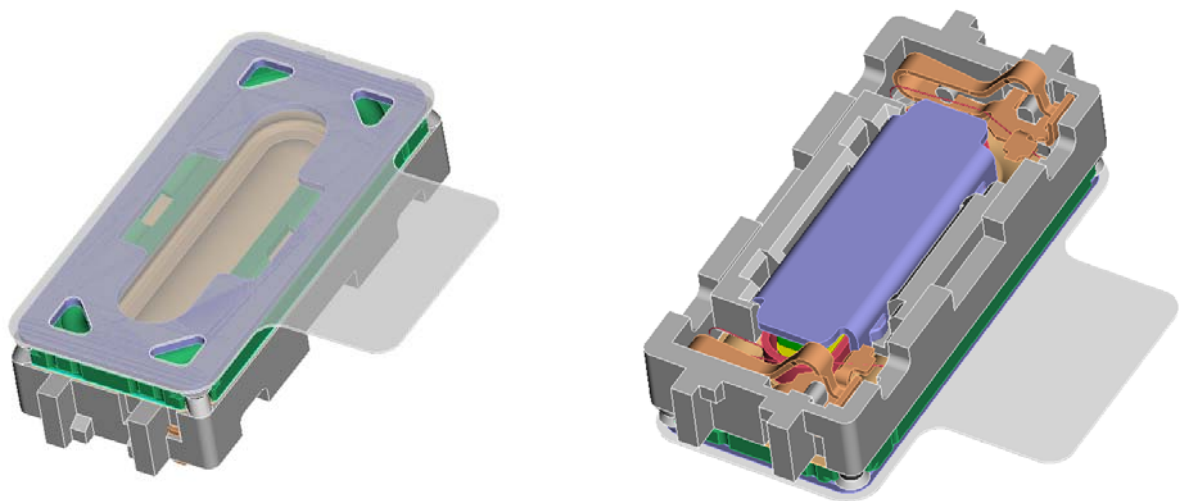

## 1. Generally description


There are two protection foils on each transducer mounted!  
Both are placed in front of the cover!  
The layers are different in form, basically identifiable on the clip!

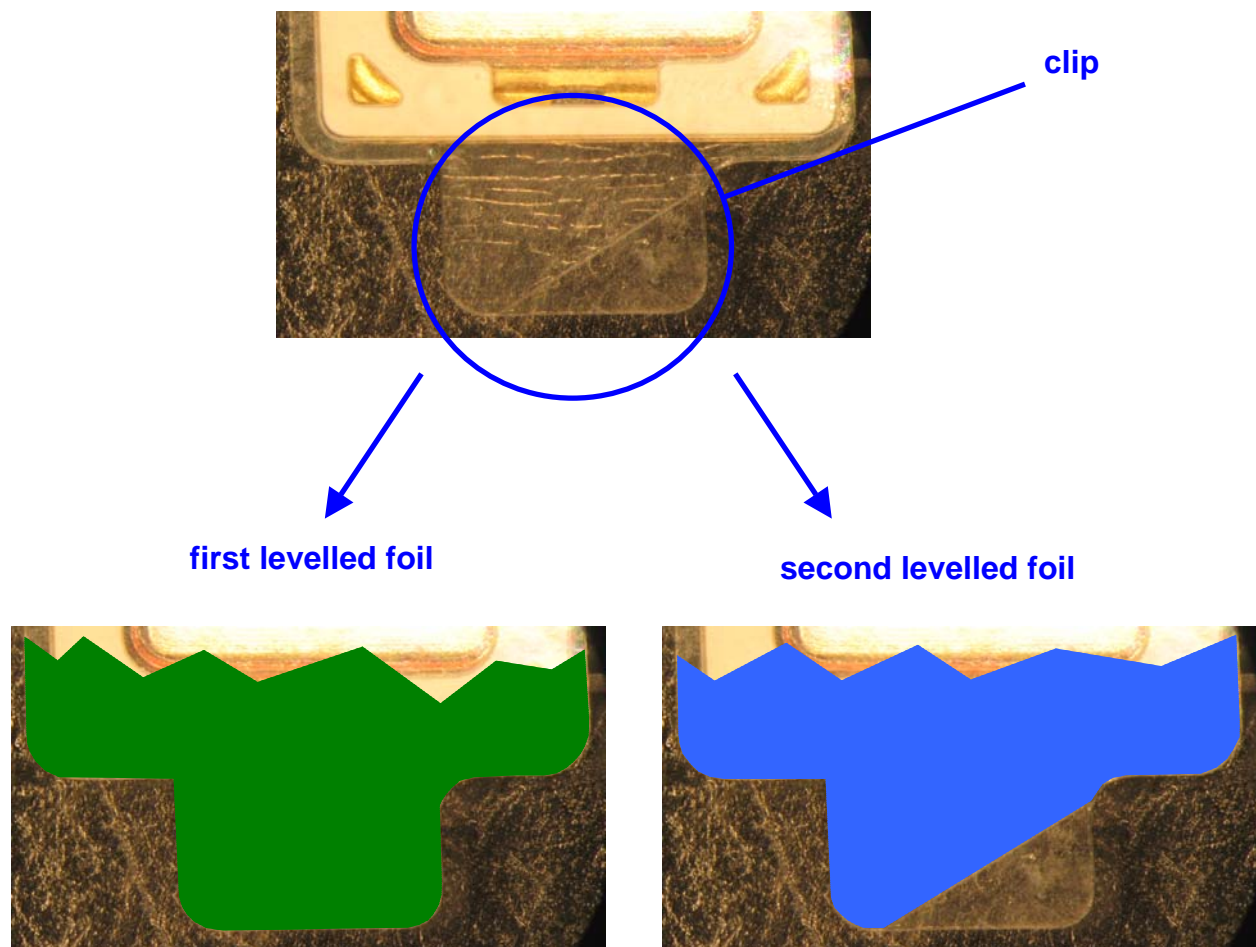

**In all cases use gloves made of not fibers material to handle the transducers manually**


## 2. Pull off the first levelled foil

To pull off the first levelled foil in all cases use tweezers.  
Take the first levelled foil on the clip and move it over the transducer as shown in the following pictures.

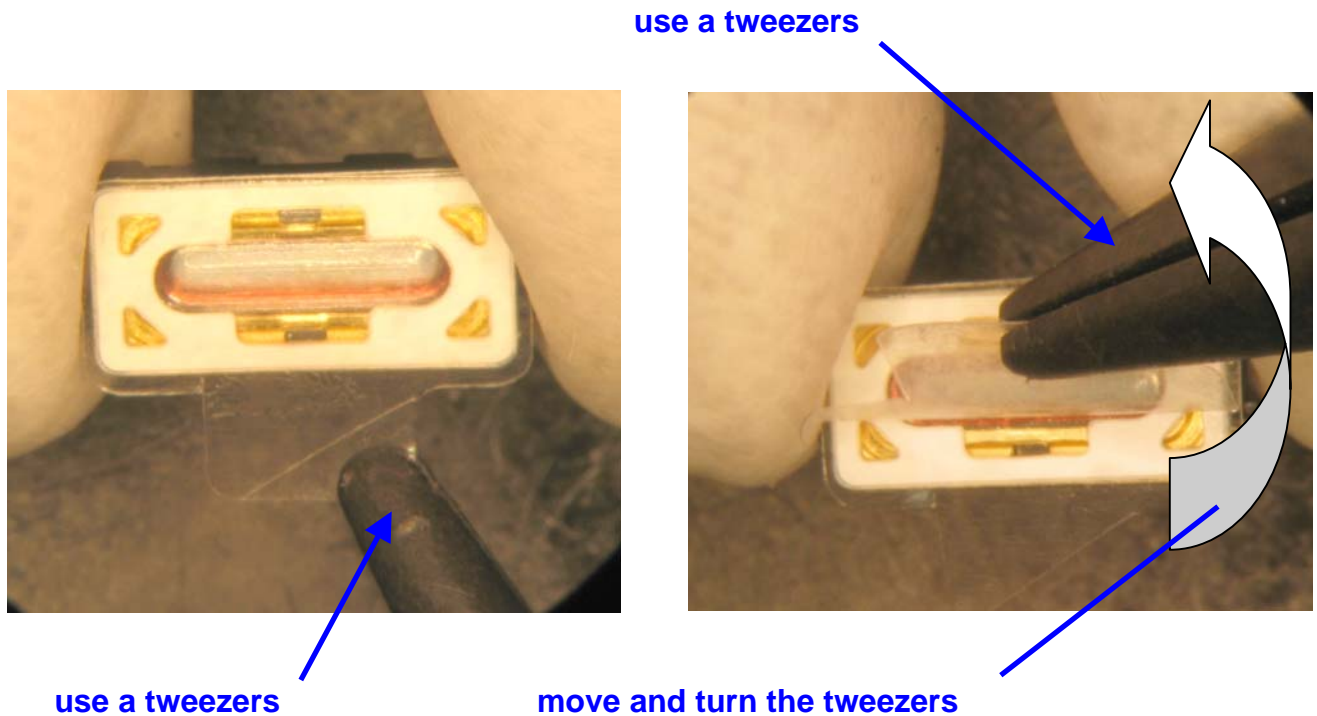


### 3.Pull of the second leveled foil

The second levelled foil is special designed to loose it from the gasket.  
On the left side close to the lift you will find a cut.  
This cut guarantees that the second levelled foil will break if you pull off the foil.

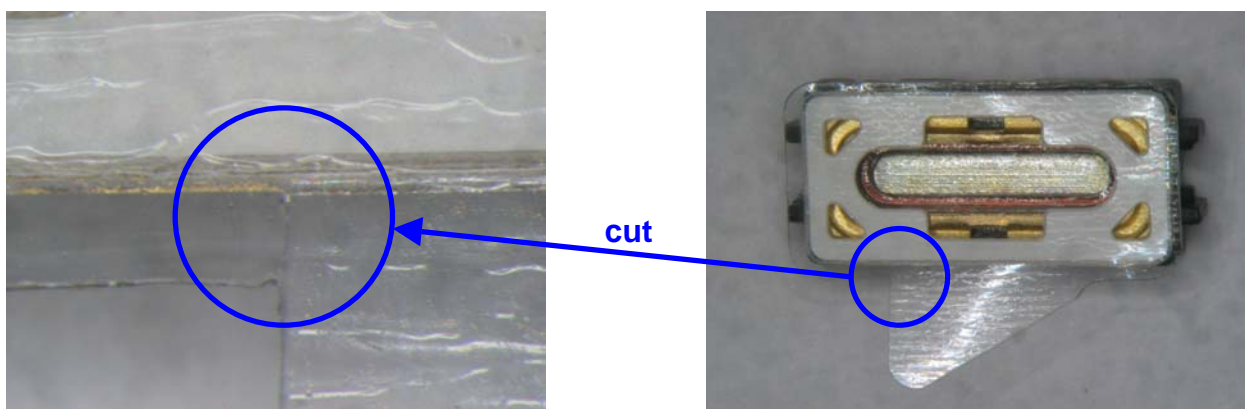

To pull off the second levelled foil, in all cases use a tweezers.  
Take the second levelled foil on the clip and move it over the transducer as shown in the following pictures.

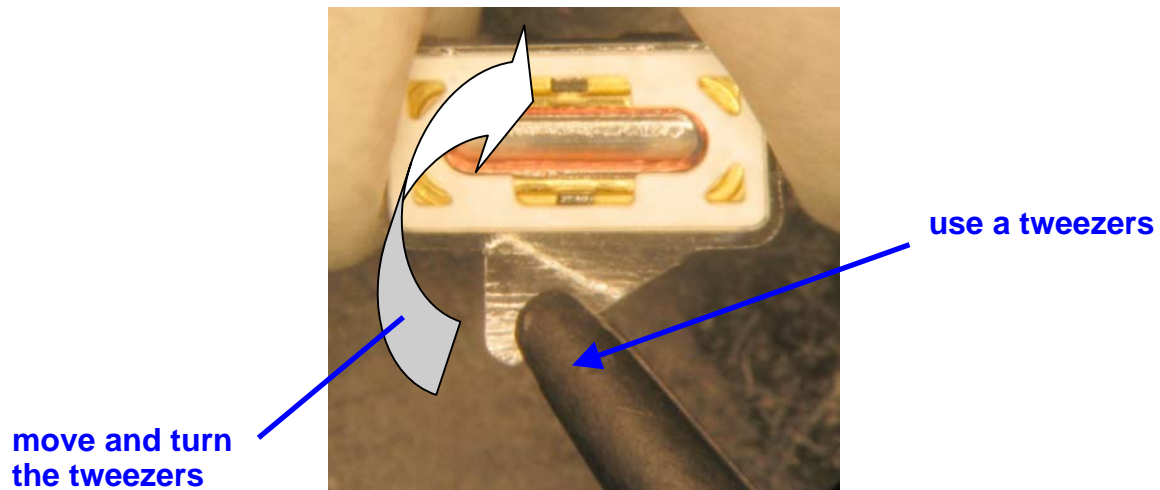

After the foil is broken in direction of the cut, move and turn the tweezers around to pull off the second foil completely.

